



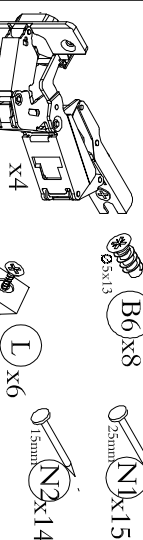

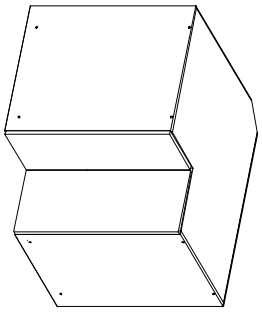
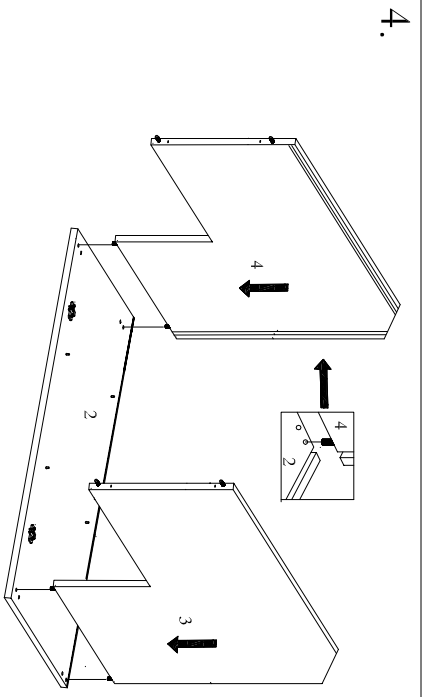
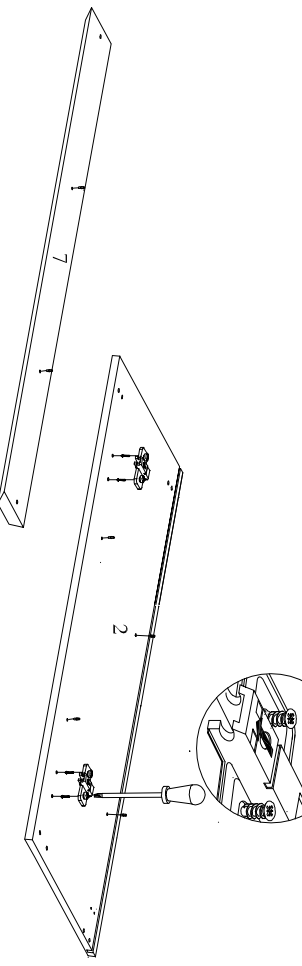
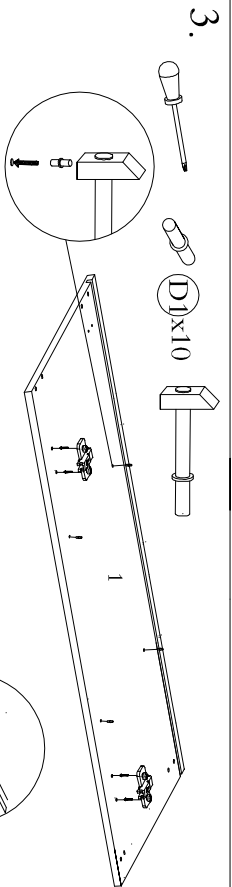
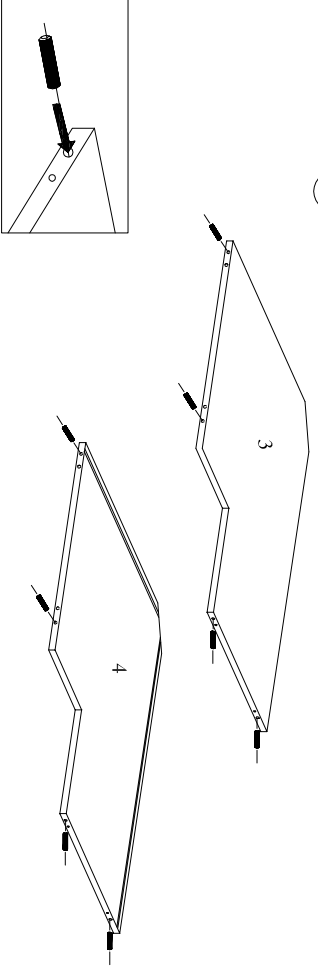



CAMPARI WNPP 6





1.

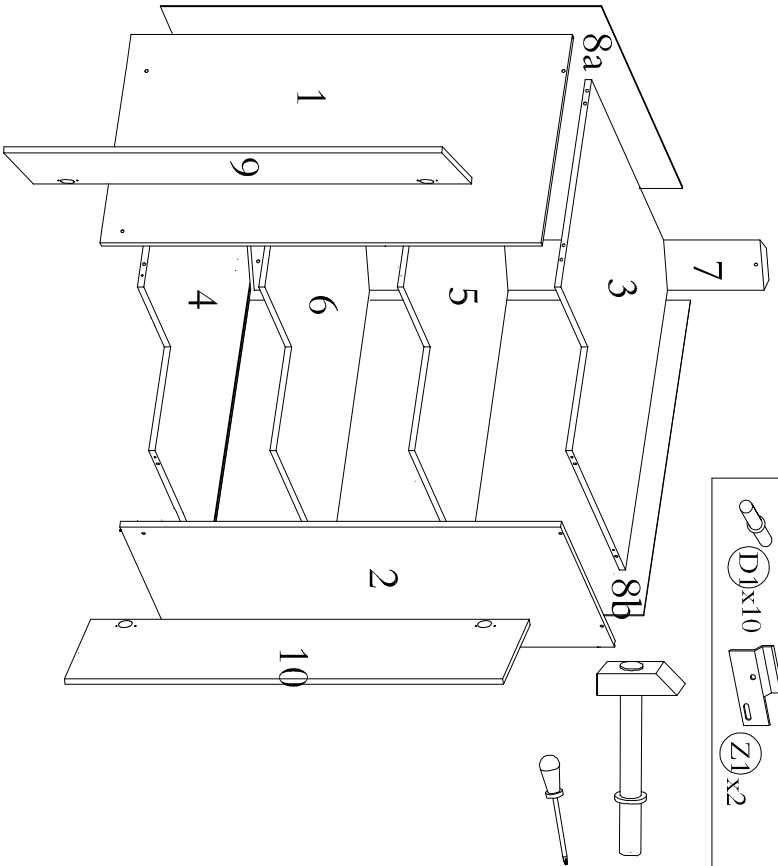




5.1

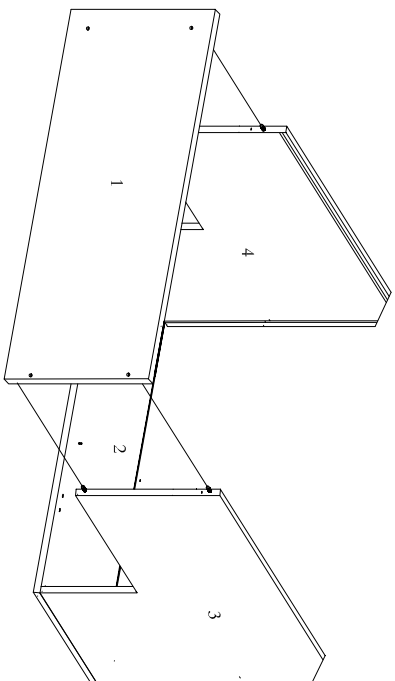


5.2

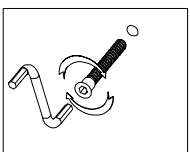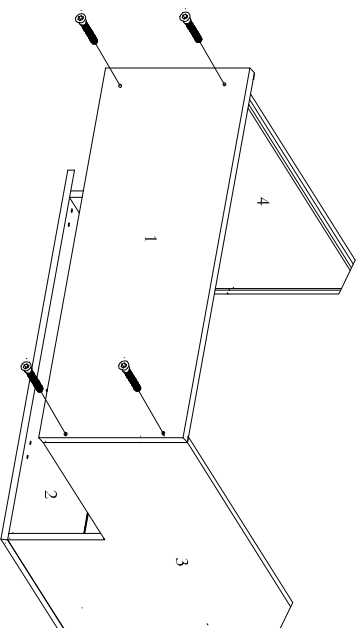



5.3

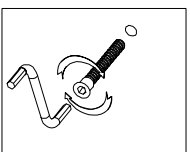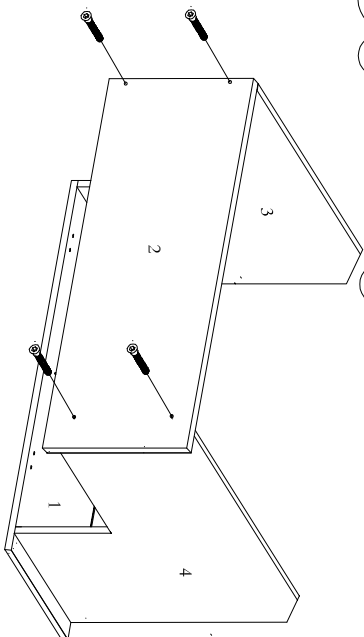






5.4

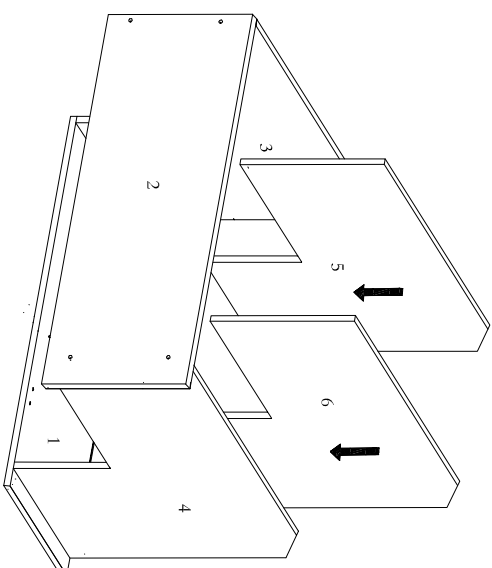

5.5

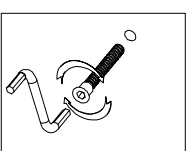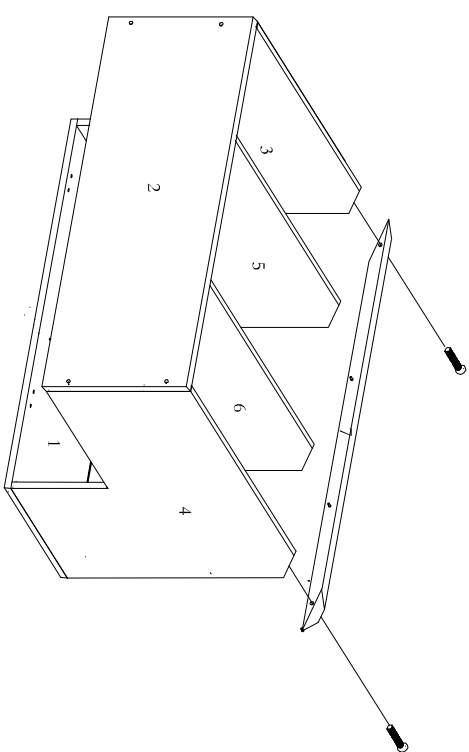


- 6. L x6 N1 x15 Hammer

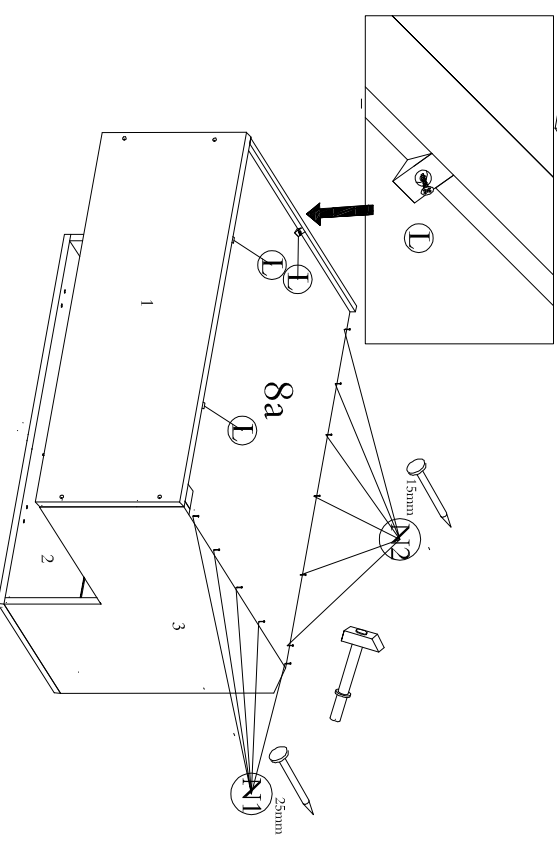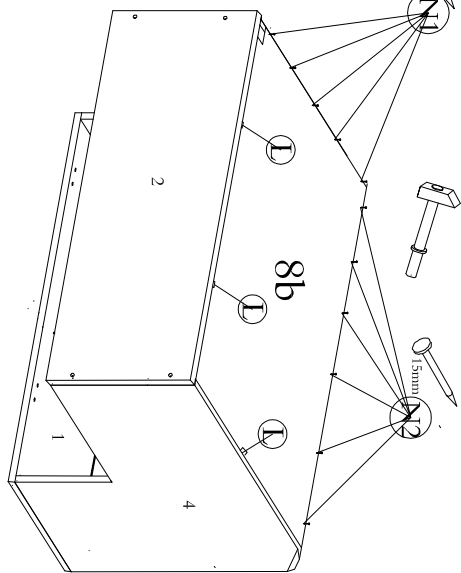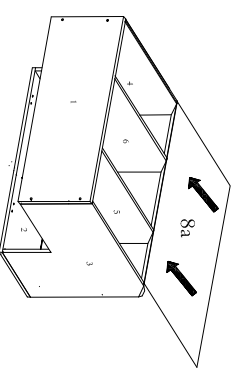
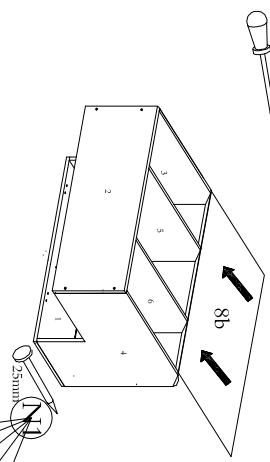
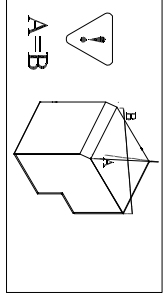


6.1

- 7. Screwdriver B3 x4 B6 x8

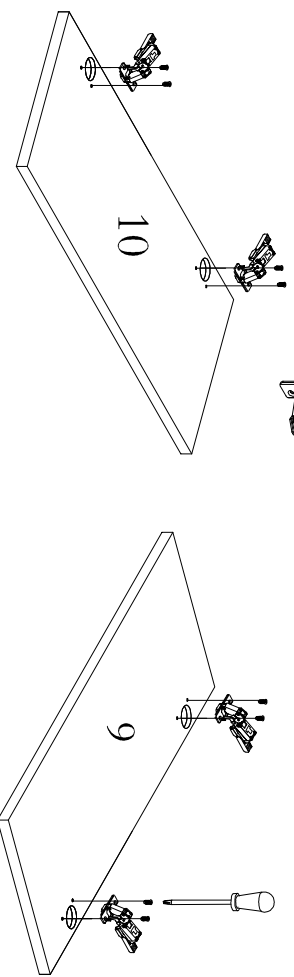

8.

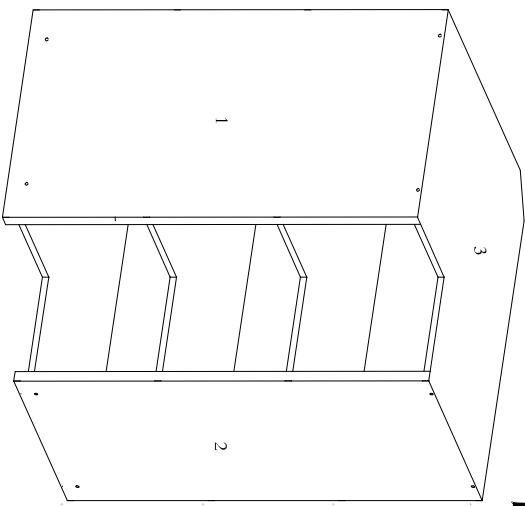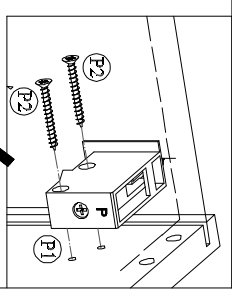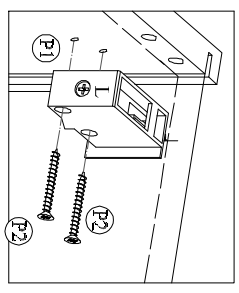

- P2 x4 $\varnothing 4 \times 30$
- P1 x1

9.

